

REDISCOVER TV


EMAGINE

THE BEST ONLINE ENTERTAINMENT EXPERIENCE ON TV

GETTING STARTED

WWW.EMAGINE.MY

THE DEVICE

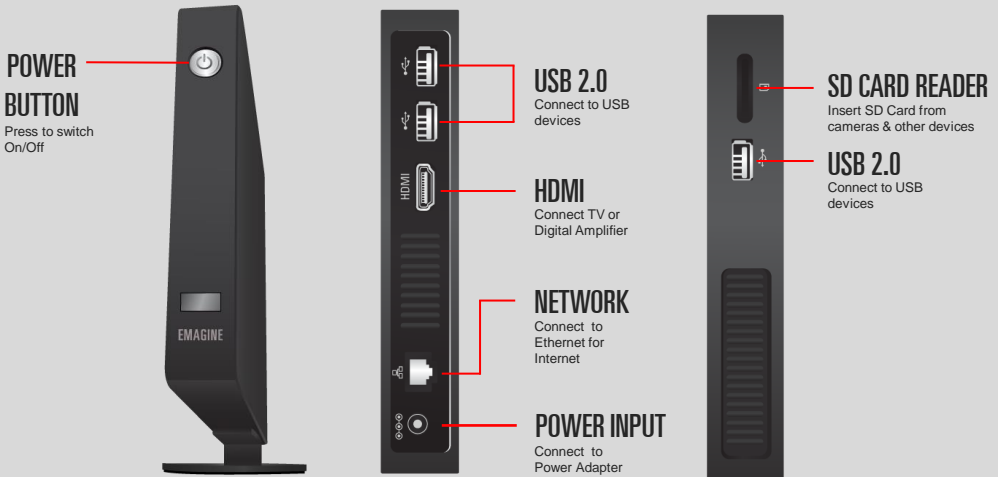

USB 2.0

- Connect & play video, music & photos from thumbdrives and external hard disks
- Connect external wired & wireless RF keyboards (not included) – requires restart before keyboard can be used. Please see section on using an external keyboard & shortcuts

SD CARD READER

- Connect & play video, music & photos saved to SD cards from Cameras & other devices
- You can upload photos directly to Facebook from TV with EMAGINE. Please see section on connecting to Facebook & other applications

NOTES

- EMAGINE comes with in-built WiFi (802.11 b/g/n) that allows you to connect to the Internet wirelessly. Please see section on Connecting EMAGINE
- EMAGINE does not support bluetooth devices
- EMAGINE does not have an internal hard disk, but you can connect an external hard disk through the USB ports

THE REMOTE CONTROL: VIDEO PLAYBACK

POWER BUTTON

Press to switch On/Off

PREVIOUS VIDEO/TRACK

STOP PLAYBACK

VOLUME UP & DOWN

MUTE VOLUME

BACK

Previous Menu. Exit. Go back.

OK

Select item. Play.

MENU

VIDEO THUMBNAIL VIEW

Show/Hide Options. Search, add to playlist. Add Channels, Edit Playlist, Sort, View, Play All – from start/from this video etc

FULLSCREEN VIDEO VIEW

Show/Hide Options. Share to Facebook, Share to EMAGINE, View Related Videos, Add to Playlist, Add Channel, Repeat etc.

MENU Options available varies depending on where you are in EMAGINE's interface. Press MENU wherever you may be to explore what you can do.



SHORTCUTS



ADD VIDEO TO FAVOURITES/PLAYLIST



SHOW FULLSCREEN/OVERLAY



SHOW ADDITIONAL OPTIONS

Thumbnail/List View: Movie Information
Playback View: Subtitles, Audio, Screen Size etc



SEARCH VIDEO

When video thumbnail is highlighted in YouTube, Vimeo, Net TV etc. The search is within the category selected

NEXT VIDEO/TRACK

PLAY/PAUSE PLAYBACK

DIRECTION PAD

BROWSE/NAVIGATE

Browse & navigate categories, thumbnails & lists

FAST FORWARD/REWIND VIDEO

During Video Playback

KEY PAD

TIME JUMP VIDEO

To jump to a particular time in a video.

Example:

To jump to 25minute 35seconds in a video, press 2535 and press OK

T9 CHARACTER INPUT (INPUT SCREEN)

Tap multiple times to scroll through characters. Use "." to backspace/delete entry

THE REMOTE CONTROL: PHOTO VIEWING

POWER BUTTON

Press to switch On/Off

PREVIOUS PHOTO STOP SLIDESHOW

BACK

Previous Menu. Exit. Go back.

OK

Select item. Play.

MENU

PHOTO THUMBNAIL VIEW

Show/Hide Options. View Options (Thumbnail, List), Sort by (Name, Size, Date, File name), Play Slideshow


FULLSCREEN PHOTO VIEW

Share to Facebook, Photo Information

MENU Options available varies depending on where you are in EMAGINE's interface. Press MENU wherever you may be to explore what you can do.



SHORTCUTS

-  PHOTO INFORMATION, SLIDESHOW ETC
During Photo Thumbnail view
-  N/A
-  N/A
-  N/A

Availability of shortcuts vary depending on where you are in EMAGINE's interface

NEXT PHOTO

PLAY/PAUSE SLIDESHOW

DIRECTION PAD

PHOTO THUMBNAILVIEW

Browse & navigate categories, thumbnails & lists

PHOTO ZOOM VIEW

Pan zoomed photo

KEY PAD

PHOTO ZOOM LEVELS

1 – 9: Zoom levels 1 to 9

0: No Zoom. Original Full Screen Photo View

T9 CHARACTER INPUT (FACEBOOK UPLOAD INPUT SCREEN)

Tap multiple times to scroll through characters. Use "*" to backspace/delete entry

USING A KEYBOARD (NOT INCLUDED)

EMAGINE WORKS EVEN FASTER WITH A KEYBOARD, & IT WORKS WITH ANY STANDARD WIRED OR WIRELESS RF KEYBOARDS (NOT BLUETOOTH) – JUST PLUG THE USB TRANSMITTER INTO ANY OF THE 3 USB PORTS ON EMAGINE AND RESTART EMAGINE TO USE.

REMOTE	KEYBOARD KEYS
MENU	ESC OR ?
BACK	BACKSPACE
OK	ENTER
DIRECTION KEYS	DIRECTION KEYS
PLAY/PAUSE	SPACEBAR
STOP	X
VOL DOWN	- OR F10
VOL UP	+ OR F11
MUTE	F12
NEXT >>	>
PREVIOUS <<	<
RED	F1
GREEN	F2
YELLOW	F3
BLUE	F4



REMEMBER TO **PRESS MENU** ON THE REMOTE, OR EITHER **ESC OR ?** ON THE KEYBOARD FOR OPTIONS TO SEE WHAT YOU CAN DO WITH EMAGINE.

CONNECTING EMAGINE

CONNECT EMAGINE TO YOUR HDTV

YOUR EMAGINE COMES WITH A HDMI CABLE, A POWER SUPPLY UNIT, A REMOTE CONTROL AND BATTERIES FOR YOUR REMOTE CONTROL.

TO CONNECT EMAGINE TO YOUR HDTV & START UP,

1. INSERT THE BATTERIES INTO YOUR REMOTE CONTROL
2. PLUG ONE END OF THE SUPPLIED HDMI CABLE INTO EMAGINE, AND THE OTHER TO THE HDMI INPUT OF YOUR TV FIRMLY AND SECURELY.
3. PLUG THE POWER SUPPLY UNIT TO YOUR ELECTRICAL SOCKET, AND PLUG THE OTHER END INTO YOUR EMAGINE. THE POWER BUTTON ON YOUR EMAGINE WILL GLOW RED
4. POINT YOUR REMOTE CONTROL TOWARDS YOUR EMAGINE, AND CLICK THE POWER BUTTON. THE POWER BUTTON ON YOUR EMAGINE WILL GLOW GREEN, AND YOUR EMAGINE WILL START UP.

CONNECT EMAGINE TO THE INTERNET

GO TO NETWORK SETTINGS

FROM THE EMAGINE MAIN MENU, GO TO "SETTINGS" BY PRESSING THE DIRECTIONAL BUTTONS ON YOUR REMOTE CONTROL (LEFT & RIGHT) AND CLICK OK. GO TO "NETWORK SETTINGS" AND CLICK OK.

SETTING-UP A WIRED LAN CONNECTION

EMAGINE IS SETUP BY DEFAULT FOR A WIRED INTERNET CONNECTION. ALL YOU NEED TO DO IS PLUG IN THE NETWORK CABLE AND IT WILL AUTOMATICALLY BE CONNECTED TO THE INTERNET.

SETTING UP A WIRELESS WIFI CONNECTION

1. SELECT NETWORK CONNECTION, NAVIGATE TO WIRELESS AND CLICK OK
2. SELECT YOUR WIRELESS NETWORK NAME (SSID), AND CLICK ON SAVE
3. ENTER YOUR WIFI PASSWORD (IF APPLICABLE)
4. FOR IP SETTINGS, LEAVE IT AS AUTOMATIC.

WHEN DONE, CLICK ON SAVE TO SAVE THE SETTINGS, AND CLICK BACK TO GO BACK TO THE MAIN MENU.

IF YOU WOULD LIKE TO MANUALLY SET THE IP & OTHER SETTINGS (USUALLY NOT REQUIRED), PLEASE GO TO WWW.EMAGINE.MY FOR MORE INFORMATION.

CONNECTING EMAGINE

HOW CAN I TELL IF I'M CONNECTED TO THE INTERNET?

1. DO YOU SEE AN UPDATED DATE AND TIME, AS WELL AS THE CONNECTED ICON AT THE BOTTOM RIGHT OF THE SCREEN? IF YOU ARE NOT ABLE TO SEE THIS, YOU ARE NOT CONNECTED TO THE INTERNET.
2. ARE YOU ABLE TO LOAD YOUTUBE/VIMEO VIDEO PREVIEWS? IF YOU ARE NOT ABLE TO SEE THIS, YOU ARE NOT CONNECTED TO THE INTERNET.

PLEASE CHECK & ENSURE THAT YOUR WIRED INTERNET CABLE HAS BEEN PLUGGED IN CORRECTLY IF YOU ARE USING A WIRED CONNECTION, AND THAT YOUR PASSWORD HAVE BEEN KEYED IN CORRECTLY IF YOU ARE USING WIFI AND TRY RECONNECTING AGAIN.

WIFI CONNECTION DISCONNECTED

EMAGINE WILL AUTOMATICALLY RECONNECT TO THE SAVED WIFI CONNECTION IF IT GETS DISCONNECTED FOR ANY REASON. IF IT HAS FAILED TO CONNECT TOO MANY TIMES IN A ROW, IT WILL STOP TRYING. DISCONNECTIONS WILL OCCUR MORE FREQUENTLY IF THE WIFI SIGNAL IS WEAK. PLACE YOUR EMAGINE AS CLOSE AS POSSIBLE TO YOUR WIFI ROUTER TO GET THE BEST SIGNAL STRENGTH AND CONNECTION.

TO RECONNECT AGAIN:-

1. SWITCH OFF AND ON EMAGINE AGAIN, AND SEE IF IT AUTOMATICALLY RECONNECTS TO THE PREVIOUSLY SAVED WIFI CONNECTION.
2. MANUALLY RECONNECT EMAGINE AGAIN TO THE DESIRED WIFI CONNECTION.

UPDATING & ACCOUNT SETUP

3, UPDATE EMAGINE

ONCE EMAGINE IS CONNECTED TO THE INTERNET, UPDATE EMAGINE WITH THE LATEST FEATURES & IMPROVEMENTS.

1. FROM THE EMAGINE MAIN MENU, SELECT SETTINGS AND GO TO UPDATES/DOWNLOADS
2. HIGHLIGHT THE LATEST UPDATE (THE FIRST ITEM ON THE TOP OF THE LIST) AND CLICK OK.
3. ENSURE THAT EMAGINE IS NOT TURNED OFF DURING THE UPDATE
4. WHEN THE UPDATE IS COMPLETE, A PROMPT WILL POP UP TO ASK YOU TO RESTART EMAGINE
5. CLICK OK AND EMAGINE WILL RESTART WITH THE LATEST FEATURES & IMPROVEMENTS

4. SET UP YOUR EMAGINE ACCOUNT

WHERE DO I SIGN UP FOR AN EMAGINE ACCOUNT?

YOU CAN SIGN UP FOR YOUR FREE EMAGINE ACCOUNT ON WWW.EMAGINE.MY. JUST CLICK ON "REGISTER" ON THE TOP LEFT CORNER OF THE PAGE.

WHY DO I NEED AN EMAGINE ACCOUNT? WHAT ARE THE BENEFITS?

1. TO ADD YOUR FAVOURITE VIDEOS, CREATE PLAYLISTS, SHARE YOUR VIDEOS, SEND VIDEOS FROM YOUR INTERNET BROWSER TO TV, WATCH COMMUNITY VIDEOS AND PLAYLISTS AND MORE
2. TO ACCESS FREE PREMIUM CONTENT & SERVICES
3. TO SUBSCRIBE TO PREMIUM CONTENT & SERVICES (ONLY IF YOU WANT TO)

CAN I STILL USE THE EMAGINE WITHOUT AN EMAGINE ACCOUNT?

YES. BUT YOU WILL LOSE OUT ON ALL THE ADDITIONAL BENEFITS OF HAVING AN ACCOUNT (AS STATED ABOVE)

DO I NEED TO TOP UP MY EMAGINE ACCOUNT WITH FUNDS, AND HOW DO I DO IT?

YOU WILL NEED TO TOP UP ONLY IF YOU WOULD LIKE TO SUBSCRIBE TO PREMIUM CONTENT & SERVICES, SUCH AS THE PREMIUM ON-DEMAND CHANNELS UNDER EMAGINE PLUS. OTHERWISE, THERE IS NO NEED TO.

TO TOP UP YOUR EMAGINE ACCOUNT, LOG IN TO YOUR EMAGINE ACCOUNT AT WWW.EMAGINE.MY, AND SELECT EMAGINE TOP UP. YOU WILL HAVE A CHOICE OF AMOUNTS TO TOP UP, AND YOU CAN TOP UP USING EITHER YOUR DEBIT OR CREDIT CARD, OR THROUGH DIRECT DEBIT TO YOUR BANK ACCOUNT ONLINE.

ACCOUNT SETUP

CAN I USE MY EMAGINE ACCOUNT TO LOGIN MORE THAN ONE EMAGINE UNIT?

WHILE YOU CAN USE YOUR EMAGINE ACCOUNT TO LOGIN DIFFERENT EMAGINE UNITS, YOU WILL NOT BE ABLE TO HAVE 2 SIMULTANEOUS LOGINS. A SECOND LOGIN WILL RESULT IN THE FIRST ONE BEING LOGGED OFF AUTOMATICALLY.

LOGGING INTO YOUR EMAGINE ACCOUNT

TO SAVE YOUR EMAGINE ACCOUNT LOGIN INTO YOUR EMAGINE:

1. FROM THE EMAGINE MAIN MENU, SELECT "SETTINGS" AND GO TO "EMAGINE ACCOUNT" AND CLICK OK.
2. KEY IN YOUR USERNAME AND PASSWORD AND CLICK LOGIN.

YOUR EMAGINE ACCOUNT WILL AUTOMATICALLY BE SAVED. ALTERNATIVELY, YOU CAN ALSO SAVE YOUR LOGIN ON THE LOGIN POP UP WHENEVER YOU TRY TO ACCESS ANY PERSONALISED FUNCTIONS OR PREMIUM CONTENT ON EMAGINE (KARAOKE ON DEMAND, PLAYLIST, ETC).

CHANGING PASSWORD FOR YOUR EMAGINE ACCOUNT

1. FROM THE EMAGINE MAIN MENU, SELECT "SETTINGS" AND GO TO "EMAGINE ACCOUNT" AND CLICK OK.
2. NAVIGATE TO CHANGE PASSWORD AND CLICK OK.
3. KEY IN YOUR CURRENT PASSWORD, AND THEN YOUR NEW PASSWORD TWICE AND THEN SELECT OK.

CHECKING YOUR EMAGINE ACCOUNT BALANCE

FROM THE EMAGINE MAIN MENU, SELECT "SETTINGS" AND GO TO "TRANSACTIONS" AND CLICK OK. YOUR EMAGINE ACCOUNT BALANCE & TRANSACTION HISTORY WILL BE SHOWN HERE.

USING THE LOGIN MANAGER

THE LOGIN MANAGER IS USED TO SAVE YOUR LOGIN FOR FACEBOOK, TWITTER AND OTHER APPLICATIONS YOU MAY CHOOSE TO USE ON EMAGINE.

1. FROM THE EMAGINE MAIN MENU, SELECT "SETTINGS" AND GO TO "LOGIN MANAGER" AND CLICK OK.
2. SELECT THE ACCOUNT YOU WISH TO LOGIN WITH.
3. KEY IN YOUR USERNAME AND PASSWORD FOR THE ACCOUNT, AND CLICK ON REMEMBER PASSWORD IF YOU WISH TO SAVE THE LOGIN INTO THE EMAGINE, AND SELECT OK TO SAVE THE DETAILS.

YOUR INDIVIDUAL LOGINS WILL BE SAVED INTO THE EMAGINE. ALTERNATIVELY, YOU CAN ALSO LOGIN THROUGH THE LOGIN POP UP WHEN YOU TRY TO ACCESS ANY OF THESE APPLICATIONS.

PLAYING ONLINE VIDEOS

PLAYING YOUTUBE & VIMEO.

HOW DO I PLAY A VIDEO?

1. FROM THE EMAGINE MAIN MENU, SELECT “VIDEOS” AND GO TO “YOUTUBE”, “VIMEO”, “NET TV” OR OTHER SECTIONS AND CLICK OK.
2. BROWSE TO THE DESIRED VIDEO AND CLICK OK, AND THE VIDEO WILL AUTOMATICALLY PLAY IN FULL SCREEN.
3. YOU CAN ALSO PLAY VIDEOS ONE AFTER ANOTHER BY HIGHLIGHTING THE VIDEO THUMBNAIL, CLICKING ON MENU ON YOUR REMOTE CONTROL AND SELECTING PLAY ALL.. YOU HAVE THE OPTION OF PLAYING ALL VIDEOS FROM THE START, OR FROM THE VIDEO YOU’VE HIGHLIGHTED.
4. YOU WILL AUTOMATICALLY RETURN TO THE BROWSING SCREEN WHEN VIDEO HAS FINISHED PLAYING.
5. DURING VIDEO PLAYBACK, CLICK ON THE BACK BUTTON TO RETURN TO THE BROWSING SCREEN
6. FROM THE BROWSING SCREEN, CLICK ON THE GREEN BUTTON TO RETURN TO FULL SCREEN ANYTIME.
7. YOU CAN PAUSE & STOP PLAYING A VIDEO BY PRESSING THE PLAY/PAUSE AND STOP BUTTON.
8. IF YOU ARE PLAYING ALL VIDEOS ONE AFTER ANOTHER, YOU CAN CLICK THE NEXT BUTTON ON YOUR REMOTE TO SKIP TO THE NEXT VIDEO, OR RESTART THE CURRENT VIDEO BY CLICKING THE PREVIOUS BUTTON.
9. YOU CAN ALSO PLAY A SINGLE VIDEO REPEATEDLY, OR PLAY ALL THE VIDEOS REPEATEDLY (IF YOU HAVE SELECTED PLAY ALL). WHEN THE VIDEO IS PLAYING, CLICK ON THE MENU BUTTON ON YOUR REMOTE CONTROL AND HIGHLIGHT REPEAT. PRESS THE OK BUTTON TO SELECT REPEAT OFF, REPEAT ONE OR REPEAT ALL.

HOW DO I SEARCH FOR A DESIRED VIDEO?

WHILE IN THE YOUTUBE/VIMEO VIDEO BROWSING SCREEN, CLICK ON THE MENU BUTTON ON THE REMOTE AND SELECT SEARCH. ALTERNATIVELY, YOU CAN CLICK ON THE BLUE BUTTON ON THE REMOTE TO GO DIRECTLY TO SEARCH.

HOW DO I PLAY HIGH QUALITY VIDEOS?

1. FROM THE EMAGINE MAIN MENU, SELECT “SETTINGS” & GO TO “VIDEO QUALITY” AND CLICK OK.
2. SELECT DESIRED QUALITY, CLICK OK AND CLICK APPLY
3. THE BEST PERFORMANCE SETTING FOR EMAGINE IS HIGH QUALITY, AND IS IDEAL FOR FIBRE INTERNET CONNECTIONS WITH SPEEDS OF 10MBPS AND ABOVE. FOR SLOWER BROADBAND SPEEDS, SELECT MEDIUM OR LOW QUALITY TO MINIMISE ONLINE VIDEO PLAYBACK ISSUES.

I HAVE SELECTED HIGH QUALITY, BUT YOUTUBE STILL PLAYS LOW QUALITY VIDEOS

BY SELECTING HIGH QUALITY, EMAGINE AUTOMATICALLY SELECTS THE HIGHEST QUALITY VERSION OF THE VIDEO YOU’RE PLAYING, UP TO TRUE 1080 HD. HOWEVER, SOME VIDEOS, ESPECIALLY THE OLDER ONES, DO NOT HAVE HIGH QUALITY VERSIONS. EMAGINE WILL CHOOSE THE BEST QUALITY AVAILABLE.

CREATING PLAYLISTS

I LIKE THIS VIDEO; I WANT TO SHARE IT ON MY FACEBOOK!

1. DURING FULL SCREEN VIDEO PLAYBACK, PRESS MENU ON YOUR REMOTE CONTROL
2. SELECT SHARE TO FACEBOOK (VIDEO WILL AUTOMATICALLY PAUSE WHILE YOU SHARE)
3. CHOOSE SHARE OR ADD COMMENT IF YOU WISH TO ADD A COMMENT.
4. TO ADD COMMENTS, YOU CAN EITHER USE THE ON-SCREEN KEYBOARD, "T9" ON YOUR REMOTE (TAPPING THE KEYPAD MULTIPLE TIMES TO SELECT A CHARACTER), OR AN EXTERNAL KEYBOARD (RECOMMENDED)
5. AFTER YOU HAVE ADDED A COMMENT, SELECT OK AND THEN CHOOSE SHARE
6. PRESS PLAY/PAUSE BUTTON ON THE EMAGINE REMOTE TO CONTINUE PLAYING THE VIDEO.

CREATING YOUR PERSONAL VIDEO PLAYLISTS FROM YOUTUBE AND VIMEO

HOW DO I CREATE A PLAYLIST?

1. IN THE THUMBNAIL/BROWSING VIEW - HIGHLIGHT THE DESIRED VIDEO AND CLICK MENU ON YOUR REMOTE CONTROL.
2. DURING FULL SCREEN VIDEO PLAYBACK - CLICK MENU ON YOUR REMOTE CONTROL
3. SELECT ADD TO PLAYLIST AND CHOOSE WHETHER YOU WOULD LIKE TO ADD TO FAVOURITES, CREATE A NEW PLAYLIST OR ADD TO AN EXISTING PLAYLIST YOU HAVE CREATED BEFORE.

THE VIDEO IS NOW ADDED INTO YOUR PERSONAL PLAYLIST UNDER "MY PLAYLISTS" IN THE "VIDEO" SECTION OF EMAGINE

HOW DO I VIEW OTHER PEOPLE'S SHARED PLAYLISTS? HOW DO I BOOKMARK OTHER PEOPLE'S SHARED PLAYLISTS?

FROM THE EMAGINE MAIN MENU, SELECT "VIDEOS" & THEN SELECT "COMMUNITY" TO VIEW VIDEOS & PLAYLISTS SHARED BY EMAGINE USERS. TO BOOKMARK, HIGHLIGHT THE PLAYLIST YOU WOULD LIKE TO BOOKMARK , PRESS THE MENU BUTTON ON THE EMAGINE REMOTE AND SELECT BOOKMARK.

THE PLAYLIST IS NOW BOOKMARKED, AND IS ACCESSIBLE UNDER MY PLAYLISTS IN THE VIDEO SECTION OF EMAGINE.

HOW DO I REORGANIZE THE VIDEOS IN MY PLAYLIST?

1. IN "MY PLAYLISTS", SELECT THE DESIRED PLAYLIST, AND CLICK OK
2. PRESS THE MENU BUTTON ON THE EMAGINE REMOTE & SELECT REARRANGE VIDEOS
3. SELECT DESIRED VIDEO TO MOVE AND CLICK OK
4. SCROLL LEFT/RIGHT TO CHANGE THE ORDER, AND CLICK OK TO PLACE THE VIDEO IN THE DESIRED ORDER.
5. WHEN DONE, PRESS THE MENU BUTTON ON THE EMAGINE REMOTE AND CLICK OK TO SAVE THE CHANGES.

THE PLAYLIST IS NOW SAVED IN THE NEW DESIRED ORDER.

ADDING ONLINE CHANNELS

HOW DO I SHARE/UNSHARE/DELETE MY PLAYLIST?

1. FROM THE EMAGINE MAIN MENU, SELECT "VIDEOS", GO TO "MY PLAYLISTS" AND CLICK OK
2. HIGHLIGHT THE PLAYLIST YOU WOULD LIKE TO SHARE/UNSHARE/DELETE
3. CLICK ON THE MENU BUTTON ON YOUR REMOTE CONTROL
4. HIGHLIGHT SHARE/UNSHARE/DELETE PLAYLIST AND CLICK OK

THE PLAYLIST IS NOW SHARED/UNSHARED/DELETED.

NOTE: IF YOU CHOOSE TO SHARE YOUR PLAYLIST, IT WILL APPEAR UNDER COMMUNITY PLAYLISTS AND OTHER EMAGINE USERS WILL BE ABLE TO WATCH AND BOOKMARK YOUR PLAYLISTS. WE HIGHLY RECOMMEND PLAYLIST SHARING AS IT IS ONE OF THE BEST WAYS FOR EMAGINE USERS TO DISCOVER THE MOST INTERESTING VIDEOS AVAILABLE ON YOUTUBE AND VIMEO, ESPECIALLY IF THEY SHARE THE SAME INTERESTS AS YOU.

ADDING A YOUTUBE OR VIMEO CHANNEL TO EMAGINE

THERE ARE TWO WAYS YOU CAN ADD ONLINE CHANNELS FROM YOUTUBE AND VIMEO TO YOUR EMAGINE

1. SEARCH FOR A VIDEO OR HIGHLIGHT A VIDEO FROM A CHANNEL YOU WISH TO ADD TO EMAGINE.
2. PRESS THE MENU BUTTON ON THE EMAGINE REMOTE.
3. SELECT ADD CHANNELS TO FAVOURITES AND CLICK OK.

THE CHANNEL IS NOW ADDED TO THE "MY CHANNELS" SECTION UNDER VIDEOS.

ALTERNATIVELY, FROM THE EMAGINE MAIN MENU, SELECT "VIDEOS", GO TO "MY CHANNELS" AND CLICK OK. WHEN YOU'RE IN MY CHANNELS, CLICK ON THE MENU BUTTON ON YOUR REMOTE CONTROL, AND CHOOSE "ADD CHANNEL" AND SEARCH FOR THE CHANNEL YOU LIKE. FROM THE RESULTS, CLICK THE OK BUTTON AND THE CHANNEL WILL BE ADDED TO THE MY CHANNELS SECTION IMMEDIATELY.

VIDEO INBOX

SEND A VIDEO FROM YOUR INTERNET BROWSER TO YOUR EMAGINE VIDEO INBOX

IF YOU'RE WATCHING A VIDEO ON YOUTUBE OR VIMEO AND WOULD LIKE TO WATCH IT LATER ON YOUR TV INSTEAD IN FULL SCREEN HD WITHOUT ANY ADS, YOU CAN DO SO WITH JUST A CLICK OF A SHORTCUT ON YOUR INTERNET BROWSER.

1. LOGIN INTO YOUR EMAGINE ACCOUNT AT WWW.EMAGINE.MY
2. UNDER "EXTRAS", SELECT "EMAGINE IT!" AND FOLLOW THE INSTRUCTIONS TO EASILY ADD THE EMAGINE IT! SHORTCUT TO YOUR BROWSER TOOLBAR
3. WHEN YOU'RE ON YOU ARE ON THE VIDEO PAGE IN YOUTUBE OR VIMEO, CLICK ON THE EMAGINE IT! SHORTCUT. IF YOU ARE NOT LOGGED INTO YOUR EMAGINE ACCOUNT, IT WILL ASK YOU TO DO SO.
4. ONCE YOU HAVE LOGGED INTO YOUR EMAGINE ACCOUNT, CLICK ON THE EMAGINE IT! SHORTCUT AND THE VIDEO WILL BE SENT TO YOUR EMAGINE INSTANTLY
5. TO VIEW THE VIDEO YOU SENT, SELECT "VIDEOS" IN YOUR EMAGINE MAIN MENU AND GO TO "MY PLAYLISTS" AND CLICK OK. SELECT "VIDEO INBOX" TO VIEW AND PLAY VIDEOS YOU HAVE SENT TO EMAGINE.

NET TV & PREMIUM CHANNELS

WATCHING NET TV

EMAGINE'S NET TV CATEGORISES HUNDREDS OF THE TOP ONLINE CHANNELS INTO EASY TO BROWSE AND EXPLORE CATEGORIES THAT ALLOW AN ENTIRELY NEW EXPERIENCE OF WATCHING ONLINE VIDEOS – A HIGH DEFINITION FULL SCREEN EXPERIENCE SPECIFICALLY DESIGNED FOR THE TV, WHICH IS VASTLY DIFFERENT FROM CONNECTING A PC TO THE TV, OTHER ONLINE VIDEO PLAYERS AND EVEN SMART TVS.

TO WATCH VIDEOS FROM NET TV,

1. FROM EMAGINE'S MAIN MENU, SELECT "VIDEOS" AND GO TO "NET TV" AND CLICK OK.
2. SELECT A CATEGORY AND CLICK OK.
3. BROWSE THROUGH THE CHANNELS INCLUDED, AND CLICK ON A CHANNEL TO VIEW THE VIDEOS AVAILABLE.
4. IF THERE IS A VIDEO YOU LIKE, YOU CAN ADD THE VIDEO TO YOUR FAVOURITES AND PLAYLISTS. EXAMPLES OF PLAYLISTS THAT CAN BE CREATED INCLUDE YOUR FAVOURITE TRAVEL DESTINATIONS, MUSIC VIDEOS, COOKING SHOWS, HOBBIES, ONLINE DOCUMENTARIES, WEB SERIES, HOW TO VIDEOS AND MORE. PLEASE SEE THE SECTION "CREATING YOUR PERSONAL VIDEO PLAYLISTS FROM YOUTUBE AND VIMEO" IN THIS GUIDE FOR MORE INFORMATION.
5. IF THERE ARE CHANNELS YOU WOULD LIKE TO FOLLOW BUT ARE NOT LISTED UNDER NET TV, YOU CAN ADD THE CHANNELS YOU LIKE UNDER MY CHANNELS TOO WITH EMAGINE. PLEASE SEE THE SECTION "ADDING A YOUTUBE OR VIMEO CHANNEL TO EMAGINE" IN THIS GUIDE FOR MORE INFORMATION.

WATCHING & SUBSCRIBING TO PREMIUM CHANNELS

EMAGINES OFFERS ON AN EVER INCREASING NUMBER OF PREMIUM CONTENT CHANNELS & SERVICES THAT YOU CAN WATCH ON-DEMAND. SOME PREMIUM CHANNELS ARE OFFERED FOR FREE, AND SOME REQUIRE A SUBSCRIPTION. TO WATCH AND SUBSCRIBE TO PREMIUM CHANNELS,

1. FROM EMAGINE'S MAIN MENU, SELECT "PLUS" AND CLICK OK.
2. SELECT A PREMIUM CHANNEL AND CLICK OK
3. FOR PREMIUM CHANNELS THAT ARE FREE TO WATCH, JUST SELECT A VIDEO AND CLICK OK TO PROCEED AND WATCH
4. FOR PREMIUM CHANNELS THAT REQUIRE A SUBSCRIPTION, A MESSAGE WILL POP UP ASKING YOU WHETHER YOU WOULD LIKE TO SUBSCRIBE TO THE CHANNEL, WITH THE CORRESPONDING PRICE OF THE SERVICE STATED. THE SUBSCRIPTION PRICES ARE USUALLY FOR A MONTH, 3 MONTHS, 6 MONTHS OR A YEAR, PAYABLE IN ADVANCE.
5. IF YOU CHOOSE TO SUBSCRIBE, SELECT THE PLAN YOU PREFER, CLICK OK AND THE AMOUNT WILL BE DEDUCTED FROM YOUR EMAGINE ACCOUNT BALANCE. THE CHANNEL OR SERVICE WILL BE AVAILABLE TO YOU IMMEDIATELY.
6. TO FIND OUT HOW YOU CAN ADD FUNDS AND TOP UP YOUR EMAGINE ACCOUNT BALANCE, PLEASE SEE THE SECTION "SET UP YOUR EMAGINE ACCOUNT" IN THIS GUIDE FOR MORE INFORMATION

USING EMAGINE AS A MEDIA PLAYER

EMAGINE IS A FULL HD MEDIA PLAYER WITH 3 USB 2.0 PORTS THAT YOU CAN USE TO CONNECT TO YOUR EXTERNAL STORAGE DEVICE OR HARD DRIVE AND PLAY YOUR MOVIES, MUSIC AND PHOTOS IN MOST MAJOR FORMATS. EMAGINE ALSO HAS AN SD CARD SLOT FOR YOU TO VIEW PHOTOS AND VIDEOS ON THE SD CARD FROM YOUR CAMERA AND OTHER DEVICES. EMAGINE DOES NOT SUPPORT RMVB PLAYBACK.

TO PLAY MOVIES, MUSIC AND PHOTOS FROM A CONNECTED EXTERNAL STORAGE DEVICE,

1. FROM EMAGINE'S MAIN MENU, SELECT "FILES" AND GO TO "VIDEO", "MUSIC" OR "PHOTOS", DEPENDING ON WHAT YOU WOULD LIKE TO PLAY AND WATCH, AND CLICK OK.
2. SELECT YOUR EXTERNAL STORAGE DEVICE AND BROWSE THE CONTENTS.
3. SELECT YOUR MOVIE, MUSIC OR PHOTO, AND CLICK OK TO PLAY OR VIEW

PLAYING MOVIE & VIDEOS

- TO GET MOVIE INFORMATION, CLICK ON MENU WHEN THE MOVIE FILE IS HIGHLIGHTED AND SELECT MOVIE INFORMATION., OR ALTERNATIVELY CLICK ON THE YELLOW BUTTON. IF YOUR MOVIE FILE IS NOT NAMED PROPERLY, THE SEARCH INFORMATION WINDOW WILL APPEAR – KEY IN THE MOVIE TITLE TO DOWNLOAD THE INFORMATION.
- YOU CAN FAST FORWARD AND REWIND A VIDEO BY PRESSING THE DIRECTIONAL BUTTONS ON YOUR REMOTE CONTROL
- YOU CAN JUMP STRAIGHT INTO A PARTICULAR TIME IN A VIDEO BY USING THE TIME JUMP FUNCTION – KEY IN THE MINUTES AND SECONDS USING THE KEYPAD ON YOUR REMOTE CONTROL, AND PRESS OK. PLEASE SEE THE SECTION "THE REMOTE CONTROL: VIDEO PLAYBACK" IN THIS GUIDE FOR MORE INFORMATION.

PLAYING MUSIC

- YOU CAN SHOW THE LYRICS TO YOUR MUSIC BY CLICKING ON THE GREEN BUTTON DURING PLAYBACK TO SHOW THE PLAYLIST VIEW, AND SELECTING SHOW LYRICS ON THE BOTTOM RIGHT

VIEWING PHOTOS

- YOU CAN ZOOM YOUR PHOTOS USING THE NUMBERS 1 TO 9 ON YOUR REMOTE CONTROL KEY PAD, AND REVERT TO THE ORIGINAL FULL SCREEN VIEW BY PRESSING 0 ON YOUR KEYPAD. PLEASE SEE THE SECTION "THE REMOTE CONTROL: PHOTO VIEWING" IN THIS GUIDE FOR MORE INFORMATION.
- TO ROTATE YOUR PHOTO , CLICK OK ON YOUR REMOTE CONTROL
- YOU CAN UPLOAD A PHOTO TO FACEBOOK DIRECTLY WITH COMMENTS., DURING FULL SCREEN VIEW, CLICK ON MENU ON YOUR REMOTE CONTROL AND CHOOSE UPLOAD TO FACEBOOK.
- YOU CAN PLAY YOUR PHOTOS AS A SLIDESHOW. HIGHLIGHT THE FOLDER WITH YOUR PHOTOS, AND SELECT OPTIONS & CHOOSE START SLIDESHOW

FOR INFORMATION ON VIDEO & FILE FORMATS THAT EMAGINE CAN PLAY, PLEASE VISIT WWW.EMAGINE.MY

TROUBLE-SHOOTING

VIDEO IS NOT SHOWING

1. IS THE TV AND EMAGINE SWITCHED ON? ENSURE THAT THE TV AND EMAGINE ARE SWITCHED ON BY LOOKING AT THE STATUS LIGHT. EMAGINE SHOULD DISPLAY A GREEN LIGHT ON THE POWER BUTTON WHEN SWITCHED ON. RED LIGHT MEANS THE UNIT IS OFF.
2. IS THE TV IN THE CORRECT HDMI MODE/CHANNEL? ENSURE THAT THE TV IS IN THE CORRECT HDMI MODE/CHANNEL THAT EMAGINE IS CONNECTED TO.
3. TRY SWITCHING EMAGINE OFF AND SWITCHING IT ON AGAIN WHILE THE TV IS LEFT ON AND IN THE CORRECT MODE. SOMETIMES THE TV MAY FAIL TO DETECT THE HDMI INPUT CONNECTED TO EMAGINE.
4. CHECK ALL CABLE CONNECTIONS BY UNPLUGGING AND RE-PLUGGING THEM INTO THEIR RESPECTIVE PORTS AGAIN. THIS IS TO ENSURE THAT THE HDMI CABLE AND OTHER CABLES (IF ANY) ARE NOT LOOSE
5. TRY CHANGING TO A DIFFERENT HDMI INPUT ON THE TV. THIS STEP IS TO ENSURE THAT THE HDMI INPUT ON THE TV IS NOT FAULTY
6. TRY CHANGING THE HDMI CABLE TO A CONFIRMED WORKING HDMI CABLE. THIS IS TO ENSURE THAT THERE IS NOTHING WRONG WITH THE HDMI CABLE BEING USED.

AUDIO NOT WORKING (WITH PICTURE SHOWING)

1. PRESS THE VOLUME UP BUTTON ON THE TV REMOTE CONTROL TO INCREASE THE VOLUME TO CHECK THE SOUND. THIS IS TO ENSURE THAT THE TV VOLUME IS NOT ZERO OR TOO LOW TO HEAR ANYTHING.
2. PRESS THE VOLUME UP BUTTON ON THE EMAGINE REMOTE CONTROL TO INCREASE THE VOLUME TO CHECK THE SOUND. THIS IS TO ENSURE THAT THE EMAGINE VOLUME IS NOT ZERO OR TOO LOW TO HEAR ANYTHING.
3. TRY PLAYING A DIFFERENT VIDEO (THAT YOU CAN CONFIRM HAS SOUND), OR PLAY A MUSIC FILE INSTEAD. THIS IS TO ENSURE THAT YOU ARE NOT PLAYING A VIDEO THAT HAS NO SOUND.
4. TRY SWITCHING EMAGINE OFF AND SWITCHING IT ON AGAIN WHILE THE TV IS LEFT ON AND IN THE CORRECT MODE. SOMETIMES THE TV MAY FAIL TO DETECT THE HDMI INPUT.
5. CHECK ALL CABLE CONNECTIONS BY UNPLUGGING AND RE-PLUGGING THEM INTO THEIR RESPECTIVE PORTS AGAIN. THIS IS TO ENSURE THAT THE HDMI CABLE AND OTHER CABLES (IF ANY) ARE NOT LOOSE
6. TRY CHANGING TO A DIFFERENT HDMI INPUT ON THE TV. THIS STEP IS TO ENSURE THAT HDMI INPUT ON THE TV IS NOT FAULTY
7. TRY CHANGING THE HDMI CABLE TO A CONFIRMED WORKING HDMI CABLE. THIS IS TO ENSURE THAT THERE IS NOTHING WRONG WITH THE HDMI CABLE BEING USED.

IF YOU HAVE TRIED ALL OF THE ABOVE AND YOU ARE STILL UNABLE TO RESOLVE THE ISSUE, PLEASE CONTACT US OR SEND YOUR EMAGINE TO THE NEAREST EMAGINE SERVICE CENTRE FOR REPAIRS/REPLACEMENT.

TROUBLE-SHOOTING

REMOTE NOT WORKING

1. IS THERE A RED BLINKING LIGHT ON THE TOP LEFT CORNER OF THE REMOTE CONTROL WHEN YOU PRESS A BUTTON? THIS IS TO ENSURE THAT THE BATTERIES INSERTED INTO THE REMOTE CONTROL HAVE POWER.
2. TRY TO CHECK USING A CAMERA, IF YOU ARE ABLE TO SEE WHITE BLINKING LIGHTS COMING FROM THE IR LEDS AT THE FRONT OF THE REMOTE WHEN A BUTTON IS PRESSED. THIS IS TO CHECK THAT THE REMOTE IS SENDING IR SIGNALS. THE WHITE LIGHT CANNOT BE SEEN WITH THE NAKED EYE, YOU WILL NEED A CAMERA TO PICK THIS UP. ALSO NOTE THAT THIS DOES NOT WORK WITH IPHONE 4S AND NEWER CAMERA PHONES. IF THERE IS NO WHITE LIGHT SEEN, THE REMOTE COULD BE FAULTY.
3. TRY SWITCHING OFF (BY UNPLUGGING THE POWER ADAPTOR) AND SWITCHING ON THE EMAGINE UNIT AGAIN BY PRESSING THE POWER BUTTON ON THE REMOTE CONTROL. THIS IS TO RESTART THE IR MODULE SOFTWARE TO ENSURE THAT IT HAS STARTED UP PROPERLY.

IF THE REMOTE IS SENDING SIGNALS (CONFIRMED WITH STEP NO.2) AND YET EMAGINE DOES NOT RESPOND TO THE REMOTE CONTROL, PLEASE CONTACT US OR SEND YOUR EMAGINE TO THE NEAREST EMAGINE SERVICE CENTRE FOR REPAIRS/REPLACEMENT.

KEYBOARD NOT WORKING

1. ENSURE THAT THE KEYBOARD IS WORKING BY TESTING IT ON A DIFFERENT DEVICE. THIS IS TO ENSURE THAT THE KEYBOARD USED IS NOT FAULTY.
2. ENSURE THAT THE KEYBOARD IS PLUGGED IN PROPERLY IN THE USB SLOT AND RESTART EMAGINE. THE KEYBOARD NEEDS TO BE PLUGGED IN BEFORE SWITCHING ON THE EMAGINE UNIT, OTHERWISE THE KEYBOARD WILL NOT BE DETECTED. IF THE KEYBOARD WAS UNPLUGGED AND PLUG BACK IN DURING A SESSION, EMAGINE WILL HAVE TO BE RESTARTED TO RE-DETECT THE KEYBOARD.
3. IF STEP 2 FAILS, TRY PLUGGING INTO A DIFFERENT USB SLOT ON THE EMAGINE UNIT, AND RESTART EMAGINE. THIS IS TO ENSURE THE USB SLOT IS NOT FAULTY OR INTERMITTENT.

OTHER TIPS

- YOU CAN ADJUST YOUR VIDEO RESOLUTION, SCREEN SIZE, SUBTITLE POSITION AND MORE WITH EMAGINE. FROM EMAGINE'S MAIN MENU, SELECT "SETTINGS" AND GO TO "DISPLAY". SELECT YOUR TV'S MAXIMUM RESOLUTION, AND SELECT "VIDEO CALIBRATION" TO FINETUNE YOUR DISPLAY. CLICKING OK IN SEQUENCE WILL HIGHLIGHT A WHITE CORNER GUIDE ON THE TOP LEFT CORNER, THEN A WHITE CORNER GUIDE ON THE BOTTOM RIGHT CORNER, THEN THE SUBTITLE PLACEMENT, AND FINALLY THE CIRCLE TO ADJUST INTO A PERFECT CIRCLE. USE THE DIRECTIONAL KEYS ON YOUR REMOTE CONTROL TO ADJUST.
- IN THE EVENT YOUR EMAGINE FREEZES AND DOESN'T RESPOND, SOFT RESTART EMAGINE BY PRESSING 1475369 IN SEQUENCE ON THE KEYPAD ON YOUR REMOTE CONTROL. IF THAT DOESN'T WORK, PERFORM A FULL RESTART BY TURNING OFF EMAGINE AND ON AGAIN USING THE POWER BUTTON ON THE EMAGINE DEVICE.

WARRANTY

EMAGINE WARRANTY STATEMENT — ONE (1) YEAR LIMITED HARDWARE WARRANTY

Subject to the additional terms and conditions set forth below, Select-TV Solutions Sdn Bhd (“STVS”) provides this Limited Warranty:

- Only to the person or entity that originally purchased EMAGINE from one of its authorised resellers or distributors; and
- Only for EMAGINE units purchased and delivered to the end user within Malaysia.

LIMITED WARRANTY

STVS warrants hardware against defects in materials and workmanship under normal use for a period of one (1) year from the date of purchase or delivery, whichever is later. (“Warranty Period”). If STVS determines that EMAGINE’s hardware is defective, STVS will either repair the unit or replace the unit with either a new or rebuilt unit, at its option. If the Warranty Period has expired or is otherwise not applicable (see Scope and Limitation on Warranty below), we will return your EMAGINE to you. More information about this warranty may be found at www.emagine.my/support.

SCOPE OF AND LIMITATION ON WARRANTY

The warranty on EMAGINE is limited to the repair or replacement of defective units as described in the Limited Warranty section above. This warranty does not cover customer training or education, installation or set up adjustments. This warranty also does not cover any issue related to the service provided by your Broadband Service Provider, including but not limited to service disruption, changes in service terms, changes in offerings, changes in broadband speeds, or technical problems. This warranty does not cover damage due to acts of God, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of, your EMAGINE. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply or attempted repair by anyone other than a facility authorised by STVS to service your EMAGINE. This warranty does not cover consumables (such as fuses and batteries).

RETURN AND WARRANTY SERVICE PROCESS

Please access and review the online help resources at www.emagine.my/support before seeking warranty service. To return or obtain warranty service for EMAGINE, please ship/deliver your EMAGINE, freight prepaid, together with proof of purchase and all accessories, in either the original packaging or packaging affording an equal degree of protection, to the STVS HQ as listed in www.emagine.my/contact-us, or any other identified service centre as identified by support@emagine.my and provide the following information with your EMAGINE: (a) model number, (b) serial number, (c) problem description, (d) date of purchase, (e) place of purchase (reseller or online place of purchase), and (f) return shipping address (P.O. boxes are not accepted).

STVS may attempt to troubleshoot a warranty-related problem prior to accepting your return/service request.

FAQS & SUPPORT

FOR MORE INFORMATION AND FAQS, PLEASE VISIT

WWW.EMAGINE.MY/SUPPORT

IF YOU HAVE ANY QUESTIONS, YOU CAN CONTACT THE EMAGINE TEAM BY:

- LEAVING A COMMENT OR MESSAGE AT WWW.FACEBOOK.COM/MYEMAGINE, OR
- SENDING AN EMAIL TO US AT SUPPORT@EMAGINE.MY

TO GET THE LATEST NEWS ON NEW FEATURES AND UPDATES TO EMAGINE, FOLLOW EMAGINE AT

WWW.FACEBOOK.COM/MYEMAGINE AND

WWW.TWITTER.COM/EMAGINEMY (@EMAGINEMY ON TWITTER)

THANK YOU

FROM THE EMAGINE TEAM

EMAGINE IS DESIGNED BY SELECT TV IN MALAYSIA. ASSEMBLED IN CHINA.